

TYPE C: With this type receiver, the existing remotes do not contain DIP switches. Proceed to **BRAND MODE SETTINGS**.

BRAND MODE SETTINGS - Set switches on clicker remote

FOR TYPE A & B - Step 1

Continue to Step 2

FOR TYPE C - Step 1

GREEN SMART-LEARN BUTTON
ON ON ON OFF → [Clicker Remote] ← Code switch settings are not used.

- OR -

ORANGE/RED SMART-LEARN BUTTON
OFF ON ON OFF → [Clicker Remote] ← Code switch settings are not used.

Continue to Step 2

Step 2 - Press and hold both buttons for 5 seconds or until LED begins to flash.

Step 3 - When LED flashes, release both buttons

Step 4 - Press the button you wish to operate the opener (your choice).



For type A & B, proceed to step 6.
For type C, continue on to Step 5

Step 5



A. Press and release the **Smart-Learn** button.



B. Press and hold button selected in **Step 4** for 3 seconds

Step 6 - Programming is complete, to test, press the button selected to activate garage door.